

EDIROL mp3 Recorders

1. Turn power ON by pushing Power switch on the left side of the recorder.
2. Hold the Finder/Menu button down until the Menu pops up onto the screen. Select **1 Recorder Setup**.
3. Set the Sample Rate to 44.1 kHz by pushing the right and left buttons on the front of the recorder. Set the REC Mode by pressing the down arrow to highlight this mode. **Select one of the following modes: WAV-24bit, WAV-16bit, or MP3-320kbps.** These three modes will provide the best sound quality for your recording. See page 28 of the manual to view the maximum recording time for each of these modes. (Note: *the size of the memory card that comes with the recorder is a 64 MB card*) Once you have completed this, select the Finder/Menu button to return to the menu.
4. Push the Finder/Menu button one more time to return to the main screen. Now, plug in the microphone or headset you are going to use to record.
5. *To use the microphone* that comes with the recorder, plug the microphone into the MIC jack on the top of the recorder.
6. *To use the headset* provided with the recorder, plug the pink jack into the MIC jack on the top of the recorder and the orange jack into the Optical jack on the right side of the recorder.
7. The recorder does not require a headset or microphone to be plugged into it in order to record but not using one will allow the recorder to pick up all sounds, not just the voice you are trying to record.
8. Press the REC button on the front. This will put the recorder in standby mode. Press the REC button a second time to begin recording. Once you have finished recording your audio press the stop button (directly below the REC button).
9. To listen to your recording, press the Finder/Menu button once and use the navigation arrows to highlight your recording. Press REC to select it. Press REC again and then press the Play/Pause button to listen to the recording. You must have a headset or headphones plugged into the Optical jack on the right side of the recorder in order to hear it.
10. To put your file onto your computer plug the gray adapter (provided) into an available USB port in the computer and the other end into the bottom of the recorder. Push the memory card/battery cover in the direction of the arrow on the bottom of the cover.
11. Open the file that appears on your computer (F or G drive on a PC, NO_NAME on desktop of a Mac). Your mp3 or wav files will be in the folder. Double click on these to listen to them. You can also move them into your personal folder and they can be used like any other mp3 or wav file in making movies, audio tracks, etc.